

Digital Board SD "A4-XS"

black display

Operating instructions for Art. 84001



Manual | Manuel

Thank you for choosing this device from TimeTEX.

1. Before working with the device

- Lesen Sie sich bitte die Bedienungsanleitung genau durch.
- By observing the operating instructions, you also avoid damaging the appliance and jeopardising your statutory warranty rights through misuse.
- We accept no liability for damage caused by non-compliance with these operating instructions.
- *Pay particular attention to the safety instructions and keep these operating instructions in a safe place!*

2. For your safety:

- Do not use the product in any other way than described in these operating instructions.
- Unauthorised repair, conversion or modification of the appliance is not permitted.

Caution! Risk of injury:

- Keep the device and batteries out of the reach of children.
- Batteries can be life-threatening if swallowed. If a battery is swallowed, this can lead to severe internal burns and death within 2 hours. If you suspect that a battery may have been swallowed or otherwise entered the body, seek medical help immediately.
- Do not throw batteries into a fire, short-circuit, disassemble or recharge them. Risk of explosion!
- Batteries contain acids that are harmful to health. To avoid battery leakage, weak batteries should be replaced as soon as possible.
- Wear chemical-resistant protective gloves and safety goggles when handling leaking batteries!

Important information on product safety!

- Do not expose the device to extreme temperatures, vibrations or shocks.
- Protect from moisture.
- Use only under adult supervision.


3. Commissioning (if the button cell is not in the device):

- Open the battery compartment with a Phillips screwdriver.
- Insert a new CR2025 button cell with the correct polarity.
- The display is now active.
- Close the battery compartment properly.
- The device is now ready for operation.
- If the fuse slide switch is in the fuse position, the appliance does not consume any power.

4. Operation:

4.1 Writing, erasing and fixing lines on the display:

- Make sure that the digital slate always lies absolutely flat and always avoid any unevenness in the contact surface.
- This could cause damage to the digital slate and also impair writing/drawing.
- The black display shows the applied lines in a different colour.
- Only the enclosed stylus may be used to write on the display, otherwise the display may be damaged.

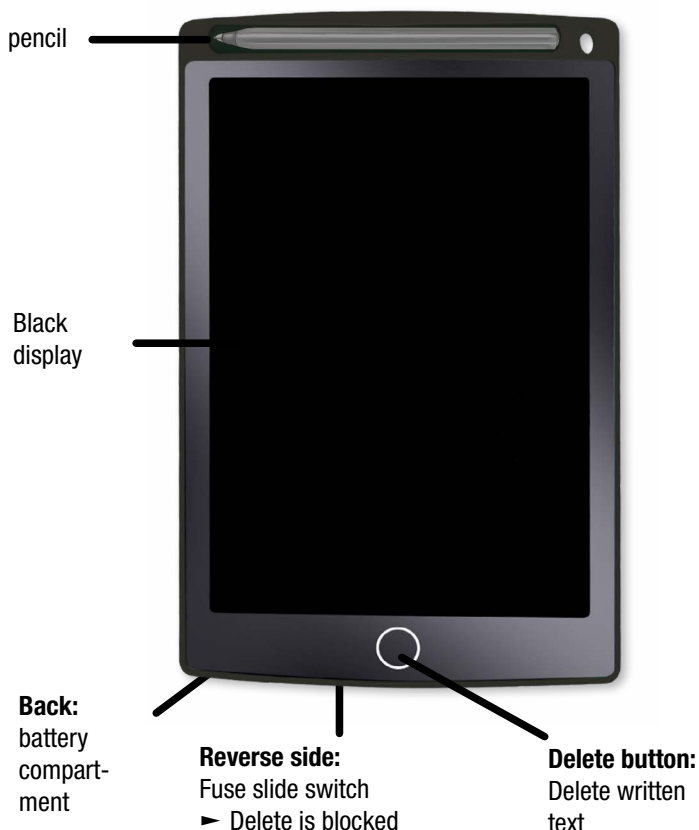

- It is important that only slight pressure is exerted on the display when writing or drawing with the enclosed pen.
- Failure to do so could result in damage to the display and cause it to malfunction.
- If you want to erase the lines drawn with the pen, briefly press the round erase button on the front of the digital slate.
- Then wait 2 seconds before labelling the display again with the pen provided.
- If you do not want the written lines to be deleted, move the slide switch on the back of the digital slate to the other side.
- The delete function is then suppressed when the round delete button is pressed, so that it is not possible to delete the lines.
- If you wish to cancel this blocking function, simply move the safety slide switch back to its original position.

4.2 Troubleshooting

- If it is not possible to delete the battery, remove and reinsert it.

4.3 Battery change

- If the functions become weaker, please replace the battery.
- To replace the battery, loosen the small screws with a Phillips screwdriver.
- The compartment can now be pulled out and the battery replaced.
- Make sure that the battery is inserted with the correct polarity.
- Then close again properly.

Batterietyp: CR2025

5. Care and maintenance

- Clean the device with a soft cloth. Do not use abrasive cleaners or solvents!
Protect from moisture.
- Remove the battery if you will not be using the device for a longer period of time.
- Store your device in a dry place.

6. Battery disposal

This product has been manufactured using high quality materials and components that can be recycled and reused. For this reason, we are legally obliged to inform you of the following:

Batteries must not be disposed of with household waste. As the end user, you are legally obliged to take used batteries to a suitable collection point. You can dispose of your old batteries at the public collection points in your municipality or wherever batteries of this type are sold. You can also return your used batteries free of charge to our dispatch warehouse (see below) or send them back to us. If you wish to make use of this option, please send your used batteries to the following address, marked "used":

TimeTEX HERMEDIA Verlag GmbH
Ländenstraße 10 · 93339 Riedenburg · Germany

TimeTEX HERMEDIA Verlag GmbH
Deggendorfstr. 5 · 4030 Linz · Austria

TimeTEX HERMEDIA Verlag GmbH
Stemmerstr. 54 · 8238 Büsingen · Switzerland

Please note that our take-back obligation is limited to used batteries of the type that we carry or have carried as new batteries in our range and to the quantities that are usual for end users.

Waste batteries contain valuable raw materials that can be recycled.

The crossed-out wheelie bin means that batteries and rechargeable batteries must not be disposed of with household waste.

Pb: Battery contains more than 0.004 per cent lead by mass


Cd: Battery contains more than 0.002 per cent cadmium by mass

Hg: Battery contains more than 0.0005 per cent mercury by mass



Disposal of old electrical appliances

The „crossed-out wheelie bin“ symbol means that electrical and electronic appliances must not be disposed of with household waste. Instead, they must be collected separately from unsorted municipal waste and handed in to a municipal collection centre free of charge. Used batteries and accumulators that are not enclosed by the old appliance must be separated from it before being handed in at a stationary collection point. You are responsible for the deletion of personal data on the old appliances to be disposed of.

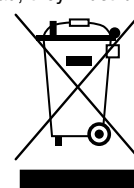

WEEE Reg. No.: 79696058 | ARA/ERA Number: 40640

Technical data

Power supply:	1x CR2025 (Button cell)
Housing dimensions:	approx. 17 x 26,5 cm
Weight:	approx. 161 g



Caution!
Not suitable for
children under 36
months. Small parts.
Risk of suffocation.

Manual | Manuel:
<https://www.timetex.com/docs>

This manual or extracts from it may only be published with the consent of TimeTEX. The technical data correspond to the status at the time of printing and are subject to change without prior notice.

The latest technical data and information on your product can be found by entering the article number on our homepage.

www.timetex.com | info@timetex.com