



"Silent" duration clock XL

Operating instructions



Manual | Manuel

Thank you for choosing this device from TimeTEX.

1. Before working with the device

- Please read the operating instructions carefully.
- By observing the operating instructions, you also avoid damaging the appliance and jeopardising your statutory warranty rights through misuse.
- We accept no liability for damage caused by non-compliance with these operating instructions.
- *Pay particular attention to the safety instructions!*
- *Keep these operating instructions in a safe place!*

2. For your safety:

- Do not use the product in any other way than described in these operating instructions.
- Unauthorised repair, conversion or modification of the appliance is not permitted.



Caution! Risk of injury:

- Gardez l'appareil et les piles hors de portée des enfants.
- Batteries can be life-threatening if swallowed. If a battery is swallowed, this can lead to severe internal burns and death within 2 hours. If you suspect that a battery may have been swallowed or otherwise entered the body, seek medical help immediately.
- Do not throw batteries into a fire, short-circuit, disassemble or recharge them. Risk of explosion!
- Batteries contain acids that are harmful to health. To avoid battery leakage, weak batteries should be replaced as soon as possible.
- Wear chemical-resistant protective gloves and safety goggles when handling leaking batteries!



Important information on product safety!

- Do not expose the device to extreme temperatures, vibrations or shocks.
- Protect from moisture.

3. Commissioning:

- Open the battery compartment.
- Insert two new 1.5 V AA batteries with the correct polarity.
- A short alarm tone sounds.
- Close the battery compartment again.
- Move the slide switch for the volume above the battery compartment to the desired position (see point 4.1).
- Specify the desired duration of the acoustic signal or whether a sequence signal is required at all (see point 4.1).
- The device is now ready for operation.

4. Operation:

- Place the timer on a smooth and level surface and unfold the stand beforehand.
- The magnets embedded on the back also enable attachment to a magnetic surface.
- The time clock can also be hung on a wall using the keyhole recess on the back.
- Set the desired time period (1 - 60 minutes) using the rotary knob. The time range is marked with a coloured remaining time display.
- The countdown begins and the coloured remaining time display reduces continuously.
- After the time has elapsed, an alarm sounds at the set volume.
- The alarm sound can be switched off completely or the duration can be set individually (see point 4.1).
- To end the alarm, you can turn the rotary knob of the coloured time disc briefly to the right and back to the zero position.

4.1 Alarm settings:

You can set the sequence signal as follows using the slide switch above the battery compartment:

Volume: quietly / loud

Alarm duration: 0/1/3/6/10/15/20/25/30 Seconds

You can set the desired duration of the alarm using the rotary switch above the battery compartment. If the duration is set to 0, the alarm will not sound.

4.2 Battery change:

- If the functions become weaker, please replace the batteries.
- Make sure that the batteries are inserted with the correct polarity.

5. Care and maintenance

- Clean the appliance with a soft, slightly damp cloth. Do not use abrasive cleaners or solvents! Protect from moisture.
- Remove the batteries if you will not be using the device for a long period of time.
- Store your device in a dry place.

6. Battery disposal

You may have purchased an item that contains batteries / rechargeable batteries (hereinafter referred to as (waste) batteries). For this reason, we are legally obliged to inform you of the following:

Batteries may not be disposed of with household waste. As the end user, you are legally obliged to take used batteries to a suitable collection point. You can dispose of your old batteries at the public collection points in your municipality or wherever batteries of this type are sold. You can also return your used batteries free of charge to our dispatch warehouse (see below) or send them back to us. If you wish to make use of this option, please send your used batteries to the following address, marked „used“:

TimeTEX HERMEDIA Verlag GmbH · Ländenstraße 10 · 93339 Riedenburg · Germany

TimeTEX HERMEDIA Verlag GmbH · Deggendorfstr. 5 · 4030 Linz · Austria

TimeTEX HERMEDIA Verlag GmbH · Stemmerstr. 54 · 8238 Büsingen · Switzerland

Please note that our take-back obligation is limited to used batteries of the type that we carry or have carried as new batteries in our range and to the quantities that are usual for end users.

Waste batteries contain valuable raw materials that can be recycled.

The crossed-out wheelie bin means: Batteries and rechargeable batteries must not be disposed of with household waste.

Pb: Battery contains more than 0.004 per cent lead by mass

Cd: Battery contains more than 0.002 per cent cadmium by mass

Hg: Battery contains more than 0.0005 per cent mercury by mass



Disposal of old electrical appliances

The „crossed-out wheelie bin“ symbol means that electrical and electronic appliances must not be disposed of with household waste. Instead, they must be collected separately from unsorted municipal waste and handed in to a municipal collection centre free of charge. Used batteries and accumulators that are not enclosed by the old appliance must be separated from it before being handed in at a stationary collection point. You are responsible for the deletion of personal data on the old appliances to be disposed of.



Technical data

Duration:	1 – 60 minutes
Alarm volume:	quiet - loud (off if alarm duration is 0)
Alarm duration	0/1/3/6/10/15/20/25/30 Seconds
Power supply:	2 x 1,5 V AA batteries
Housing dimensions:	320 mm ø, 30/40 mm profund (sans / avec bouton rotatif)
Weight:	360 g (only the device)

Manual | Manuel:
www.timetex.com/docs

This manual or extracts from it may only be published with the consent of TimeTEX. The technical data correspond to the status at the time of printing and are subject to change without prior notice.

The latest technical data and information on your product can be found on our homepage by entering the article number used on the packaging or the product.

www.timetex.com | info@timetex.com

