



Timer “Silent” Compact

Operating Instructions



Manual | Manuel

Thank you very much for choosing this TimeTEX device.

1. Before using the device

- Please read the user manual carefully.
- By following the instructions in the user manual, you will also avoid damaging the appliance and jeopardising your statutory rights in the event of a fault due to misuse.
- We accept no liability for damage caused by failure to follow these instructions.
- *Pay particular attention to the safety instructions and keep this user manual in a safe place!*

2. For your safety:

- Do not use the product in any way other than that described in this user manual.
- You must not repair, modify or alter the appliance yourself.



Warning! Risk of injury:

- Keep the device and the batteries out of the reach of children.
- Batteries can be life-threatening if swallowed. If a battery is swallowed, it can cause severe internal chemical burns and lead to death within 2 hours. If you suspect that a battery may have been swallowed or otherwise entered the body, seek medical assistance immediately.
- Do not throw batteries into fire, short-circuit them, take them apart or recharge them. Risk of explosion!
- Batteries contain acids that are harmful to health. To prevent batteries from leaking, replace weak batteries as soon as possible.
- Wear chemical-resistant protective gloves and safety goggles when handling leaking batteries!



Important safety information!

- Do not expose the device to extreme temperatures, vibrations or shocks.
- Protect from moisture.

3. Commissioning:

- Open the battery compartment.
- Insert a new 1.5 V AAA battery, ensuring the polarity is correct.
- The display will switch on (00:00).
- Close the battery compartment.
- The device is now ready for use.

4. Operation:

4.1 Return clock modules

- To set the time, use the “MIN” button to enter the desired number of minutes and the “SEC” button to enter the desired number of seconds.
- Press the “Start/Stop” button to start the countdown.
- Once the time has elapsed, an audible signal will sound for 30 seconds. This can be stopped early by pressing any button.
- To correct the set time or to reset the clock to “00:00”, press the “MIN” and “SEC” buttons simultaneously.
- The maximum time that can be set is 99:59 (99 minutes, 59 seconds).

4.2 Stopwatch mode

- For this mode, the time display must always be set to 00:00; otherwise, the countdown timer mode will be activated automatically.
- To set the time to 00:00, press the “SEC” and “MIN” buttons simultaneously.
- The timer is started and stopped by pressing the “START/STOP” button.
- Timing can be paused as often as required by pressing the “START/STOP” button and resumed by pressing it again.
- A beep sounds when the “START/STOP” button is pressed successfully.