



Voice recorder

„Individual“

Operating instructions

1. Slide the switch on the underside to Record.
2. Press and hold the main button. The LED lights up and you can speak into the microphone on the bottom of the device for up to 30 seconds.
3. Release the main button when you have finished recording.
4. Slide the switch to Play.
5. Briefly press the main button. The device starts to play the recorded sounds and the LED flashes briefly once it has finished.
6. When the voice recorder is not in use, slide the switch to OFF to save the batteries.
7. The transparent plastic cover can be removed by pulling it off the base. (The first time you pull it off, the cover may be a little tight).
8. You can place your own pictures under the plastic cover and replace the lid.

Important information

Please keep these instructions for future reference. The voice recorder requires 3 x AAA batteries. The batteries should only be changed by an adult. Remove empty batteries from the voice recorder. Do not mix new and old batteries. Only use batteries of the same or a comparable type. Change the batteries if the function is disrupted.

The voice recorder must not come into contact with water or other liquids.

WARNING Choking hazard - small parts not suitable for children under 3 years.

Battery disposal

This product has been manufactured using high quality materials and components that can be recycled and reused. For this reason, we are legally obliged to draw your attention to the following:

Batteries must not be disposed of with household waste. As the end user, you are legally obliged to take used batteries to a suitable collection point. You can dispose of your old batteries at the public collection points in your municipality or wherever batteries of this type are sold. You can also return your used batteries free of charge to our dispatch warehouse (see below) or send them back to us. If you wish to make use of this option, please send your used batteries to the following address, marked 'used':

TimeTEX HERMEDIA Verlag GmbH
Ländenstraße 10 · 93339 Riedenburg · Germany

Please note that our take-back obligation is limited to used batteries of the type that we carry or have carried as new batteries in our range and to the quantities that are usual for end users.

Used batteries contain valuable raw materials that can be recycled.

The crossed-out wheelie bin means that batteries and rechargeable batteries must not be disposed of with household waste.

Pb: Battery contains more than 0.004 per cent lead by mass

Cd: Battery contains more than 0.002 per cent cadmium by mass

Hg: Battery contains more than 0.0005 per cent mercury by mass



Disposal of old electrical appliances

The "crossed-out wheelie bin" symbol means that electrical and electronic appliances must not be disposed of with household waste. Instead, they must be collected separately from unsorted municipal waste and handed in to a municipal collection centre free of charge. Used batteries and accumulators that are not enclosed by the old appliance must be separated from it before being handed in at a stationary collection point. You are responsible for the deletion of personal data on the old appliances to be disposed of.

