



Timer “Silent” L

User manual



Manual | Manuel

Merci d'avoir choisi cet appareil de la marque TimeTEX.

1. Before using the device

- Lesen Sie sich bitte die Bedienungsanleitung genau durch.
- By following the operating instructions, you will also avoid damaging the device and jeopardising your statutory rights in the event of defects due to misuse.
- We accept no liability for damage caused by failure to observe these operating instructions.
- *Please pay particular attention to the safety instructions!*
- *Keep this instruction manual in a safe place!*

2. For your safety:

- Do not use the product in any way other than as described in this instruction manual.
- Unauthorised repair, modification or alteration of the device is not permitted.



Caution! Risk of injury:

- Keep the device and batteries out of the reach of children.
- Batteries can be life-threatening if swallowed. If a battery is swallowed, it can cause severe internal burns and death within 2 hours. If you suspect that a battery may have been swallowed or otherwise entered the body, seek medical attention immediately.
- Do not throw batteries into fire, short-circuit them, take them apart or recharge them. Risk of explosion!
- Batteries contain acids that are harmful to health. To prevent batteries from leaking, weak batteries should be replaced as soon as possible.
- When handling leaking batteries, wear chemical-resistant protective gloves and safety goggles!



Important information regarding product safety!

- Do not expose the device to extreme temperatures, vibrations or shocks.
- Protect from moisture.

3. Commissioning:

- Open the battery compartment.
- Insert two new 1.5 V AA batteries, ensuring the correct polarity.
- A short alarm tone sounds.
- Close the battery compartment again.
- Set the volume slide switch above the battery compartment to the desired position (see section 4.1).
- The device is now ready for use.

4. Operation:

- Place the timer on a smooth, level surface and unfold the stand beforehand.
- The magnets embedded in the rear also enable attachment to a magnetic surface.
- The duration clock can also be hung on a wall using the keyhole recess on the back.
- Set the desired duration (1–60 minutes) using the rotary knob. The time range is marked with a coloured remaining time display.
- The countdown begins and the coloured remaining time display decreases continuously.
- When the time has elapsed, an alarm tone sounds at the set volume.
- The alarm tone can also be switched off completely (see section 4.1).
- To stop the alarm, turn the knob briefly to the right and back to the zero position.

4.1 Alarm settings:

You can set the time signal as follows using the slide switch above the battery compartment:

Volume:  switch off /  quietly /  loud

Alarm duration: 3 seconds

4.2 Battery replacement:

- If the functions become weaker, please change the batteries..
- Ensure that the batteries are inserted with the correct polarity..

5. Care and maintenance

- Clean the device with a soft, slightly damp cloth. Do not use abrasive cleaners or solvents! Protect from moisture.
- Remove the batteries if you are not going to use the device for a long period of time.
- Store your device in a dry place.

6. Battery disposal

This product has been manufactured using high-quality materials and components, which can be recycled and used again. For this reason, we are legally obliged to point out the following:

Batteries must not be disposed of in household waste. As the end user, you are legally obliged to take used batteries to an appropriate collection point. You can take old batteries to your local authority collection points or hand them in at any location where batteries of the relevant type are being sold. You can also hand in batteries free of charge at our dispatch warehouse (see below) or send them back there. If you wish to take advantage of this option, please send your old batteries marked as “used” to the following address.

TimeTEX HERMEDIA Verlag GmbH · Ländenstraße 10 · 93339 Riedenburg · Germany

TimeTEX HERMEDIA Verlag GmbH · Deggendorfstr. 5 · 4030 Linz · Austria

TimeTEX HERMEDIA Verlag GmbH · Stemmerstr. 54 · 8238 Büsingen · Switzerland

Please note, our obligation to take back old batteries is limited to the types of batteries currently or previously available as new in our product range, and in the customary quantities expected for end users.

Old batteries contain valuable raw materials that can be recycled.

The crossed-out wheelee bin means: disposable and rechargeable batteries must not be disposed of in household waste.

Pb: Battery contains over 0.004 percent by mass lead

Cd: Battery contains over 0.002 percent by mass cadmium

Hg: Battery contains over 0.0005 percent by mass mercury



Electronic device disposal

The “crossed-out wheelee bin” sign means: electrical and electronic devices must not be disposed of via household waste. These devices should, in fact, be collected separately from unsorted residential waste and can be handed in free of charge at a local authority collection point. Old disposable or rechargeable batteries that are not sealed inside the old device should be removed before it is handed in at the fixed collection point. You must take your own responsibility for deleting any personal data on old devices for disposal.



WEEE-Reg.-Nr.: 79696058 | ARA/ERA-Nr.: 40640

Technical data

Duration:	1 – 60 minutes
Power supply:	2 x 1,5 V AA batteries
Case dimensions:	190 mm ø, 30/40 mm deep (without/with rotary knob)
Weight:	360 g (device only)

Manual | Manuel:

www.timetex.com/docs

This manual or excerpts thereof may only be published with the consent of TimeTEX. The technical data is correct at the time of printing and is subject to change without prior notice. The latest technical data and information about your product can be found by entering the item number on our homepage.

www.timetex.com | info@timetex.com

