




Noise meter

“Chatter-O-Meter”

Instruction (Keep these in a safe place)

- To switch on the appliance, press the “On/ Off” button on the top of your noise blade.
- Use the + (increase) and - (decrease) buttons to set the noise level limit until the green light reaches the desired level.
- If a sound is emitted below the set limit value, the green LEDs light up until the noise level is reached.
- As soon as the sound is above the set limit value, all red LEDs light up in addition to the green ones until the sound level is reached.

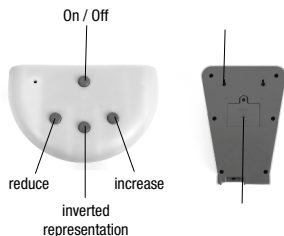

Change batteries

- You need 3 x AAA batteries (included) for the noise meter.
- Remove the battery compartment cover, carefully take out the old batteries and dispose of them responsibly.
- Insert new batteries and ensure that the polarity is correct.
- Now close the battery compartment again.

Further important information

- To clean the appliance, wipe it with a clean, damp cloth.
- Do not allow the appliance to come into contact with water or other liquids.
- Protect the device from direct sunlight and heat.
- If your product malfunctions, please switch it off and on again to reset it.

Battery disposal

This product has been manufactured using high-quality materials and components, which can be recycled and used again. For this reason, we are legally obliged to point out the following:

Batteries must not be disposed of in household waste. As the end user, you are legally obliged to take used batteries to an appropriate collection point. You can take old batteries to your local authority collection points or hand them in at any location where batteries of the relevant type are being sold. You can also hand in batteries free of charge at our dispatch warehouse (see below) or send them back there. If you wish to take advantage of this option, please send your old batteries marked as "used" to the following address:

TimeTEX HERMEDIA Verlag GmbH
Ländenstraße 10 · 93339 Riedenburg · Germany

TimeTEX HERMEDIA Verlag GmbH
Deggendorfstr. 5 · 4030 Linz · Austria

TimeTEX HERMEDIA Verlag GmbH
Stemmerstr. 54 · 8238 Bisingen · Switzerland

Please note, our obligation to take back old batteries is limited to the types of batteries currently or previously available as new in our product range, and in the customary quantities expected for end users. Old batteries contain valuable raw materials that can be recycled.

The crossed-out wheellie bin means: disposable and rechargeable batteries must not be disposed of in household waste.

Pb: Battery contains over 0.004 percent by mass lead

Cd: Battery contains over 0.002 percent by mass cadmium

Hg: Battery contains over 0.0005 percent by mass mercury



Electronic device disposal

The "crossed-out wheellie bin" sign means: electrical and electronic devices must not be disposed of via household waste. These devices should, in fact, be collected separately from unsorted residential waste and can be handed in free of charge at a local authority collection point. Old disposable or rechargeable batteries that are not sealed inside the old device should be removed before it is handed in at the fixed collection point. You must take your own responsibility for deleting any personal data on old devices for disposal.



WEEE-Reg.-Nr.: 79696058 | ARA/ERA number: 40640

Manufacturer:

TTS Group LTD
Unit 1, Park Lane Business Park
Kirkby-in-Ashfield
Nottinghamshire
NG17 9GU
UK

Distribution: TimeTEX
HERMEDIA Verlag GmbH
Ländenstraße 10
93339 Riedenburg
Germany



Caution! Not suitable
for children under
36 months. Small parts.
Risk of suffocation.

©TimeTEX HERMEDIA Verlag GmbH
Ländenstraße 10 · 93339 Riedenburg · Germany
TimeTEX AT · Linz | TimeTEX CH · Bisingen

Save address for verification purposes!

www.timetex.com
info@timetex.com

Art. 62629