



Voice recorder “Min”

Operating instructions



Manual | Manuel

Thank you for choosing this device from TimeTEX.

1. before working with the device

- Please read the operating instructions carefully.
- By observing the operating instructions, you also avoid damaging the appliance and jeopardising your statutory warranty rights through misuse.
- We accept no liability for damage caused by failure to observe these operating instructions.
- *Pay particular attention to the safety instructions!*
- *Keep these operating instructions in a safe place!*

2. For your safety

- Do not use the product in any other way than described in these operating instructions..
- Unauthorised repair, conversion or modification of the appliance is not permitted..



Caution! Risk of injury:

- Keep the device and batteries out of the reach of children.
 - Batteries can be fatal if swallowed. If a battery is swallowed, this can lead to severe internal burns and death within 2 hours. If you suspect that a battery may have been swallowed or otherwise entered the body, seek medical help immediately.
 - Do not throw batteries into a fire, short-circuit, disassemble or recharge them. Explosion hazard!
 - Batteries contain harmful acids. To avoid battery leakage, replace weak batteries as soon as possible.
 - Wear chemical-resistant protective gloves and safety goggles when handling leaking batteries!
- Important notes



Important information on product safety!

- Do not expose the device to extreme temperatures, vibrations or shock.
- Protect from moisture.

3. Commissioning

- Open the battery compartment with a small screwdriver.
- Insert three new LR44 button cells with the correct polarity.
- Close the battery compartment again with the small screwdriver.
- The device is now ready for use.

4. operation

- To record, slide the switch on the floor to "Rec".
- Then press and hold the perforated disc for the duration of the recording
- Recording starts as soon as the device beeps once and the red LED on the bottom lights up.
- When the recording time of 20 seconds has elapsed or the disc is released, the device beeps twice and the red LED switches off.
- To play the recording, set the switch to "Play" and play the recorded text by briefly pressing the perforated disc.
- The old text is deleted each time a new recording is made.

5. Technische Daten

Technical data	20 seconds
Power supply:	3x LR44 button cells
Housing dimensions:	Approx. 4.5 cm Ø, approx. 2.5 cm high
Weight:	26 g



This manual or extracts from it may only be published with the consent of TimeTEX. The technical data correspond to the status at the time of printing and are subject to change without prior notice.
The latest technical data and information on your product can be found by entering the article number on our homepage.

Battery disposal

This product has been manufactured using high-quality materials and components, which can be recycled and used again. For this reason, we are legally obliged to point out the following:

Batteries must not be disposed of in household waste. As the end user, you are legally obliged to take used batteries to an appropriate collection point. You can take old batteries to your local authority collection points or hand them in at any location where batteries of the relevant type are being sold. You can also hand in batteries free of charge at our dispatch warehouse (see below) or send them back there. If you wish to take advantage of this option, please send your old batteries marked as "used" to the following address:

TimeTEX HERMEDIA Verlag GmbH · Ländenstraße 10 · 93339 Riedenburg · Germany

TimeTEX HERMEDIA Verlag GmbH · Deggen Dorfstr. 5 · 4030 Linz · Austria

TimeTEX HERMEDIA Verlag GmbH · Stemmerstr. 54 · 8238 Bisingen · Switzerland

Please note, our obligation to take back old batteries is limited to the types of batteries currently or previously available as new in our product range, and in the customary quantities expected for end users.

Old batteries contain valuable raw materials that can be recycled.

The crossed-out wheellie bin means: disposable and rechargeable batteries must not be disposed of in household waste.

Pb: Battery contains over 0.004 percent by mass lead

Cd: Battery contains over 0.002 percent by mass cadmium

Hg: Battery contains over 0.0005 percent by mass mercury



Electronic device disposal

The "crossed-out wheellie bin" sign means: electrical and electronic devices must not be disposed of via household waste. These devices should, in fact, be collected separately from unsorted residential waste and can be handed in free of charge at a local authority collection point. Old disposable or rechargeable batteries that are not sealed inside the old device should be removed before it is handed in at the fixed collection point. You must take your own responsibility for deleting any personal data on old devices for disposal.



WEEE-Reg.-Nr.: 79696058 | ARA/ERA number: 40640