

Professional' voice recorder

128 MB spoker



Contents:

- Voice recorder
- User manual
- 1x USB charging cable (type A)
- Lanyard with quick-release fastener

Important information

- Please keep the information in this user manual for future reference.
- Please read all instructions completely before implementing them.
- To clean, wipe the surface with a clean, damp cloth.
- Do not allow the product to come into contact with water or other liquids.
- Keep the product away from direct sunlight and heat.
- If your product malfunctions, please switch it off and on again to reset it.

Utilisation

To switch on the 'Profi' voice recorder, set the slide switch to ON. The LED lights up yellow continuously to indicate that the device is switched on.

Recording

To make a recording, briefly press the red record button. A single beep sounds and the LED lights up red. To stop recording, briefly press the recording button again, a double beep will sound and the LED will light up solid green.

Playback

To play back the recording, briefly press the green play button. Playback starts. To pause playback, briefly press the green play button again. The LED flashes yellow. To stop playback, press the green play button for 1-2 seconds. The LED lights up yellow continuously. Audio playback can be output via the internal loudspeaker or the headphones.

Switch to the next recording

To skip to the next track, press the play button for 3 seconds until you hear a single beep and the LED flashes green quickly. Please note, this only works when playback of the current track is paused. Briefly press the play button to play the previous track.

Volume control

Use the volume controls to increase or decrease the volume.

Aufnahmen löschen

To delete a single recording, pause the track during playback and then press and hold the record button (15 seconds) until the LED flashes red, then release the button. When the

track has been deleted, the LED lights up green continuously. To delete all tracks, press the record button (15 seconds) during playback until the LED flashes red and then release the button. When all tracks have been deleted, the LED lights up green continuously. Files can also be deleted on the PC; to do this, the voice recorder must be connected to it via USB.

Connect voice recorder to PC

Stellen Sie sicher, dass der Sprach-Rekorder ausgeschaltet ist. Entfernen Sie die Basiskappe vom Sprach-Rekorder und stecken Sie den Sprach-Rekorder-USB-Anschluss in einen USB-Anschluss am PC. Die LED blinkt in mehreren Farben.

After connecting to the PC, the voice recorder is displayed as a USB drive. The voice recorder saves your recordings in the MIC_REC folder. Files can be copied to or from the device.

Note: The voice recorder battery is charged while it is connected to a PC.

Charging the voice recorder

- If the voice recorder still has 10% battery life, the LEDs flash red - charging is required.
- Make sure that the voice recorder is switched off.
- Remove the base cap from the voice recorder.
- Plug the USB port of the voice recorder into a USB docking station, a suitable USB charger or the PC.
- During the charging process, the LED flashes red every few seconds.
- When the charging process is complete, the LED lights up green continuously.
- Fully charging the voice recorder can take up to 2-3 hours.
- Once fully charged, the voice recorder can be actively used for approx. 2-3 hours.

Precautions for the battery

The voice recorder lithium battery (rechargeable battery) which cannot be replaced. DO NOT attempt to remove the battery!

Battery disposal

This product has been manufactured using high-quality materials and components, which can be recycled and used again. For this reason, we are legally obliged to point out the following:

Batteries must not be disposed of in household waste. As the end user, you are legally obliged to take used batteries to an appropriate collection point. You can take old batteries to your local authority collection points or hand them in at any location where batteries of the relevant type are being sold. You can also hand in batteries free of charge at our dispatch warehouse (see below) or send them back there. If you wish to take advantage of this option, please send your old batteries marked as “used” to the following address:

TimeTEX HERMEDIA Verlag GmbH

Ländenstraße 10 • 93339 Riedenburg • Germany

TimeTEX HERMEDIA Verlag GmbH

Deggendorfstr. 5 • 4030 Linz • Austria

TimeTEX HERMEDIA Verlag GmbH

Stemmerstr. 54 • 8238 Büsingen • Switzerland

Please note, our obligation to take back old batteries is limited to the types of batteries currently or previously available as new in our product range, and in the customary quantities expected for end users.

Old batteries contain valuable raw materials that can be recycled.

The crossed-out wheelie bin means: disposable and rechargeable batteries must not be disposed of in household waste.

Pb: Battery contains over 0.004 percent by mass lead

Cd: Battery contains over 0.002 percent by mass cadmium

Hg: Battery contains over 0.0005 percent by mass mercury



Electronic device disposal

The “crossed-out wheelie bin” sign means: electrical and electronic devices must not be disposed of via household waste. These devices should, in fact, be collected separately from unsorted residential waste and can be handed in free of charge at a local authority collection point. Old disposable or rechargeable batteries that are not sealed inside the old device should be removed before it is handed in at the fixed collection point. You must take your own responsibility for deleting any personal data on old devices for disposal.

WEEE-Reg.-Nr.: 79696058 | ARA/ERA number: 40640